

Instruction for installation and usage

Bubble Wall with Color Change Buttons

(Model Number: BWWMBTN)

Product Introduction: Bubble Wall with Color Change Buttons

The Bubble Wall with Color Change Buttons is a captivating and therapeutic sensory product designed to enhance visual and tactile stimulation. Measuring 600x105x1100 mm, this innovative bubble wall features vibrant LED lights and dynamic bubbles, creating a mesmerizing display.


Equipped with four color-coded buttons (red, green, blue, white) and a cube controller, users can interact with the bubbles and lights, changing the patterns to match the colors for a fun and educational experience.

The Bubble Wall with Color Change Buttons promotes sensory integration and color recognition through engaging play, making it ideal for sensory rooms, therapy centers, educational facilities, and home use. Easy to maintain, the product includes a manual water management system and algacide to keep the water clean. Enhance your sensory environment with this dynamic and versatile product. For support, please contact support@playlearn.com



Specification:

- Four buttons Controlled
- Water tank Chamber x 4
- Frame Color: Opal
- Input Voltage: 12 VAC
- Transformer: 12V 4.5 Amp
- Maximal Power: 42Watts
- LED light: DMX 5050-2812, 60 chips/meter
- Solenoid Valve: 12v 6.5w x 4pcs
- PCB control board x 1pc
- Air pump: 12VAC 5.5w x1pc
- Material: Acrylic
- Program Override: Available

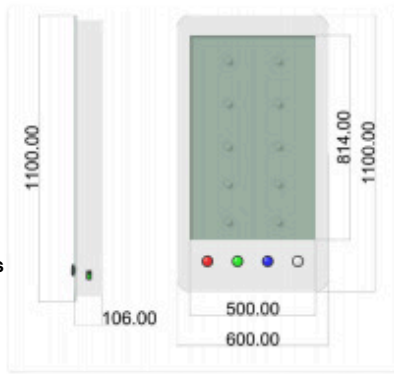

Product Details

- Dimensions: 600x105x1100 mm

Components:

- Bubble wall panel - 1 pc
- Transformer 12V 4Am - 1 pc
- Hand pump for fill and drain water - 1 set
- Bracket - 1 pc
- Expansion Screws - 14 pcs
- Screw driver - 1 pc
- Rubber Cap - 1 pc

 
Sensory toy

HOW TO INSTALL THE PRODUCT

A. Preparation:

- Gather tools: electric drill, level, screwdriver, hammer, and a pen.
- Ensure the area is clear and ready for installation.


B. Install item to the wall:

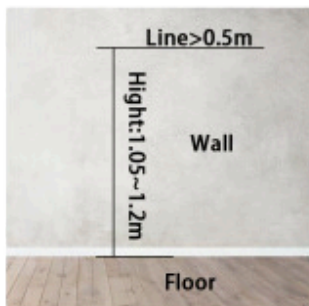

1. Use the level to mark a horizontal line on the wall at a height of 105-110 cm from the floor.



2. Align the top holes of the wall brackets with the marked line and mark all screw positions.

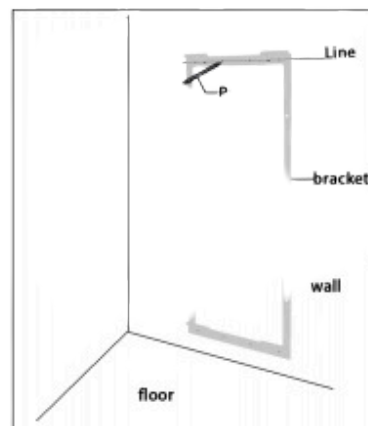

3. Take the bracket and align the top row of holes with the centerline on the wall
- Use a pen to mark circles on the wall through each hole in the bracket.



4. Drill holes at the marked positions.



5. Insert the expansion screws plastic base into the holes using a hammer.




6. Align the brackets with the drilled holes. Secure the brackets to the wall using screws and a Phillips screwdriver.


Instruction for installation and usage

Bubble Wall with Color Change Buttons


(Model Number: BWWMBTN)

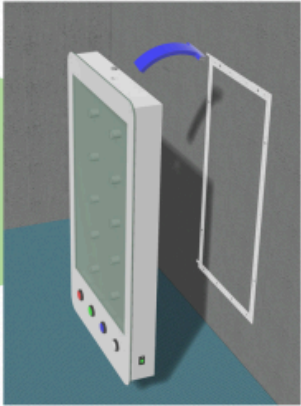

7. Hang the bubble wall on the mounted brackets. Ensure that the bubble wall is securely mounted and stable.

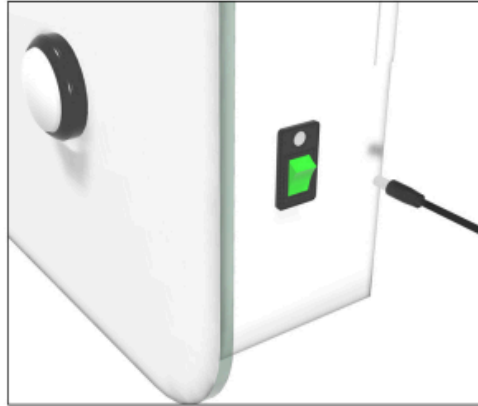

8. Insert the power cable into the DC socket on the side of the bubble wall. Plug in the power supply and switch on the device to test the lights and bubbles.

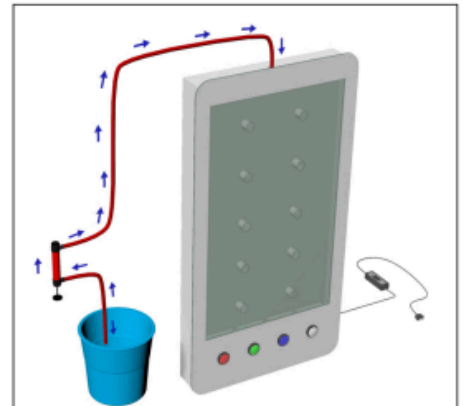

9. Disconnect the power before adding water. Use a bucket to fill the manual pump. Connect the pump's output hose to the small hole at the top of the bubble wall. Pump water into the tank until it reaches just above the white top edge. Replace the top cap and reconnect the power.

Sensory toy

Malfunction

1. Light off:
 - a. Transformer is faulty b. Controller malfunction.
2. Bubble doesn't come out
 - a. Transformer faulty b. Solenoid valve faulty c. Air pump faulty
3. Buttons' light off
 - a. Button comes faulty.
4. Everything is off.
 - Transformer faulty
5. Bubbles are not interacting with buttons pressing action
 - Controller faulty.

If anything malfunction occurred please check accordingly from above mentioned facts and contact supplier for replacement of accessory.

Reminder:

1. Please keep children away from the power socket. We suggest the power supply is secured and hidden.
2. Let children play under adult supervision in case any unpredictable emergency occurs.
3. Please do not scratch or knock on the bubble wall that may damage the tank, or conducting serious leakage.
4. Please fill the water when power off. If there is sign of leakage please stop filling water and contact supplier for support, do not exceed the water level marked on the bubble wall.
5. Please turn off the item when not in use.
6. It is strongly recommended to use distilled water when filling the bubble wall.
7. This item is intended for indoor use only.
8. We recommend replacing the water in the tank every 2-3 months.

Maintenance Tips

- Cleaning: Wipe the surface with a soft cloth to avoid scratches.
- Water Management: Add water periodically to maintain the correct level, and use algacide to prevent algae growth.
- Moving the Product: Drain the water using the manual pump before relocating.
- Troubleshooting: Ensure the power supply is connected and the switches are turned on. If problems persist, contact support@playlearn.com

Enhance your sensory environment with Bubble Wall with Color Change Buttons by Playlearn, offering endless possibilities for sensory exploration and enjoyment. For support, please contact support@playlearn.com