

SPECIFICATION



Musical Piano

Article: e1261

DISTRIBUTED BY
PLAYLEARN



1. SAFETY INSTRUCTIONS

Read these safety instructions carefully before using the product!

To avoid the risk of fire, electric shock, personal injury, or damage to property while operating this device, follow the basic safety instructions.

1.1 ATTENTION! DISCLAIMER IN USING A MUSICAL PIANO

- Use only indoors.



- This appliance can be used by children aged from 3 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use under adult supervision.
- Periodically inspect the cords, plugs and for damage.
- Do not allow liquid to get on the body of the device.
- The product shall be installed by qualified personnel.
- If the external flexible cord is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a simi-

lar qualified person in order to avoid a hazard.

1.2 SAFETY RULES FOR PRODUCT INSTALLATION

- Please check the equipment for damage that may occur during delivery.
- Keep the packaging out of the reach of children. Packaging may cause suffocation.
- Install the product only indoors with observance of temperature modes from + 10 °C to + 30 °C and admissible humidity of 30-70 %.
- Do not install the device near central heating radiators or heaters, or in direct sunlight, near air conditioners.
- It is not allowed to install the product on a surface from readily flammable materials.
- The device should be installed near a socket outlet that is easily accessible.
- Pay attention to the voltage - according to the requirements of your country's network. In case of inconsistency of marking - do not use the device!

- Keep the packaging out of the reach of children. Packaging may cause suffocation.
- Do not leave the power cord unattended in places where people can go. They may trip over power cord, which may result in electric shock, fire, product damage, or injury.
- Install the product in a clean, dry place.
- If the product is accidentally dropped or the case is damaged, turn off the product and unplug the power cord.
- Do not drop any objects on the product and do not beat it. This may result in injury, breakage or damage of the product.
- Do not use the power cord if it is damaged or unplugged.
- Be sure to fully insert the power cord plug into the AC socket outlet.
- When you disconnect the power cord, pull it by the plug. Do not bend the power cord excessively.
- Not to step and place heavy objects on the power cord.
- Do not disassemble, repair, or replace the AC cord.
- If the supply cord is damaged, it shall be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The power cord should only be connected to grounded socket outlets in accordance with national wiring regulations.

1.3 POWER CORD WARNING

Failure to follow these requirements may result in personal injury, product damage, ignition, property damage, or electric shock.

- If water or other foreign matter gets on the electronics, unplug the power cord immediately.
- Protect the power cord from physical or mechanical damage. Make sure that it does not twist, become entangled, touch sharp objects, pinched by door or lie underfoot. Pay special attention to plugs, socket outlets, and places where the cord connects to the device.
- Use only rated voltage.
- Do not connect some extension cords and electrical devices to the same socket outlets.
- Do not touch the cord with wet hands. Make sure the socket outlet and plug contacts are clean, dry, dust-free, and so on. If the cord contact is wet or dirty, wipe it dry and clean before use.
- If a foreign object enters the unit, unplug the power cord. Also, do not touch the power cord immediately after plugging it in.
- Do not unplug the power cord while the product is turned on.

SPECIFICATION

1.4 SAFETY RULES WHEN THE PRODUCT IS MOVING

Failure to follow the safety rules when product is moving - may result in electric shock or damage of the product.

- Before moving of the product it should be turned off and unplugged. It may take two people to carry a large product.
- When the product is carrying, hold it with both hands.
- Do not shake the product while moving.

1.5 SAFETY RULES FOR THE USE OF THE PRODUCT

Failure to follow the safety rules for the use of the product may result in electric shock and damage to health or damage to the product. There is also a risk of fire and property damage.

- Do not disassemble, repair or change the product yourself.
- Do not cover the device with cloth or other materials when it is turned on.
- If you do not plan to use the product for a long time, unplug it.
- Do not beat or scratch the surface of the product with metal objects.
- Avoid exposure to high temperatures and humidity.
- Do not place or store flammable substances near the product.

Careless handling of flammable substances may present an explosion or fire hazard.

- Unplug the device immediately, unplug the power cord (unplugging the power cord, pull it by the plug) if:
 1. There is a power failure or unstable voltage;
 2. You hear a non-standard sound and/or feel non-standard smell from the device;
 3. You notice that the power cord is damaged;
 4. The device has been dropped or damaged;
- The power cord plug is used to disconnect the device from the power supply. In case of an emergency, access to the power plug must remain free.
- The power cord must be unplugged before cleaning of the product.
- Periodically check the cords and plugs for damage.
- If the product is damaged, do not use it and keep it out of the reach of children.


2. USER MANUAL

2.1 Assembly procedure

Arrange the keys of Musical piano in the order shown in Pic. 1.


The sequence of installation of the main elements of the product (see Pic. 2):

1. Determine the place of installation.
2. Install the mounting bar.
3. Install decorative overlays on the screws (install the screws on the inside of the bar). Pre-output the wire for the controller on one of the keys that has been defined as extreme.
4. Install the keys in series by connecting them with wires.
5. Fasten the keys with screws.
6. Install the upper decorative overlays on the textile Velcros.

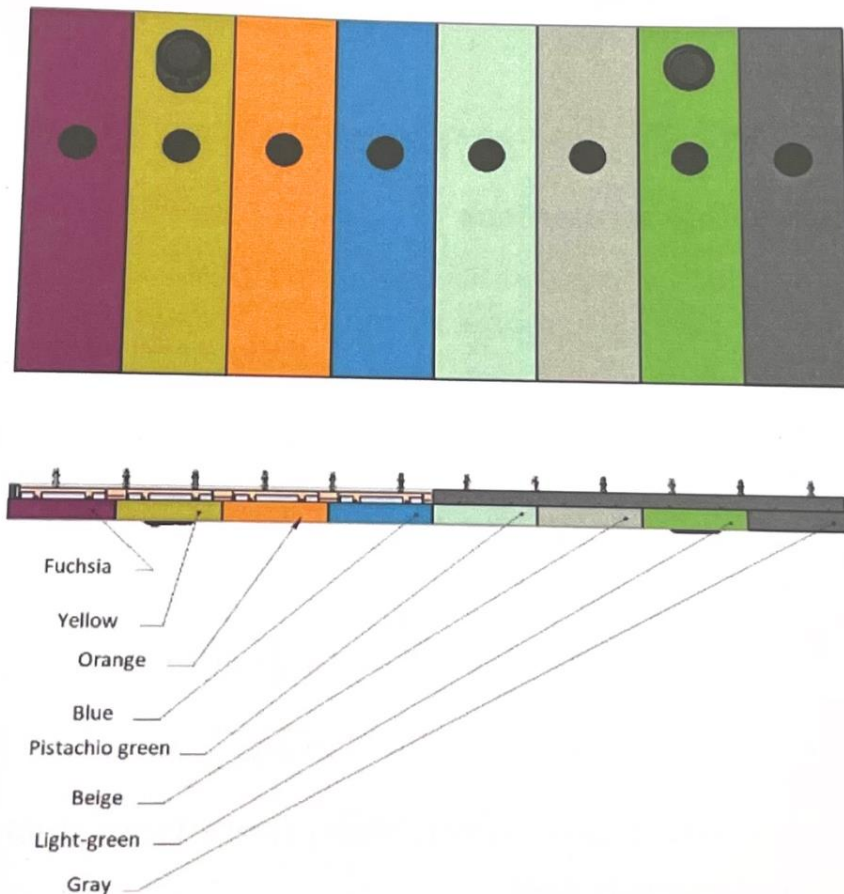

Pic. 1 Location of keys by color

SPECIFICATION

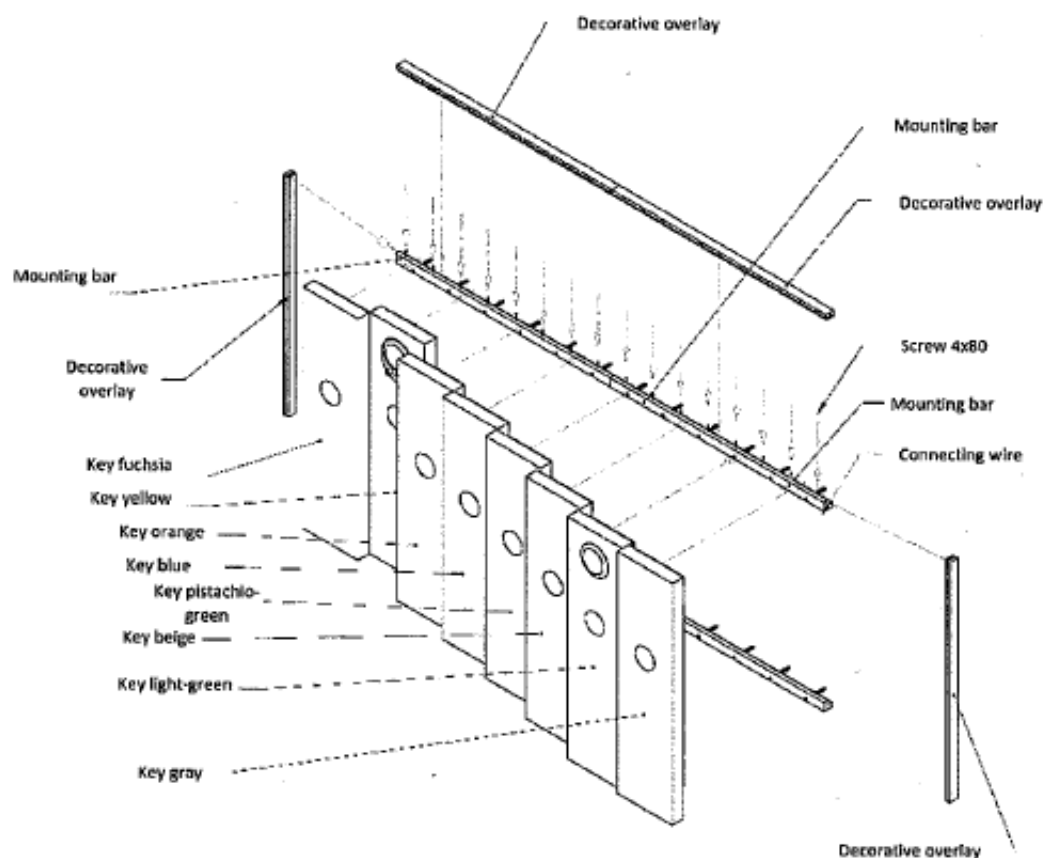

Pic. 2 Sequence of installation of the main elements

2.2 Installation instructions

It is recommended mounting the product to a retaining wall or a wall made of concrete, stone, granite, solid blocks or solid brick.

Necessary tools for installation:

- perforator;
- screwdriver;
- pencil and ruler.

The product must be installed by two adults.


Make markings on the wall for dowels.

Drill holes with a perforator, clean them from dust. Install an 8x100 anchor dowel in each hole.

Tools description:








Screwdriver

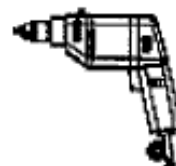


Perforator

 Components list

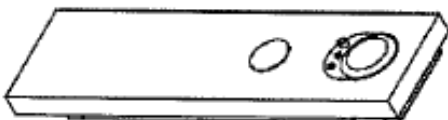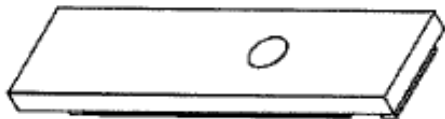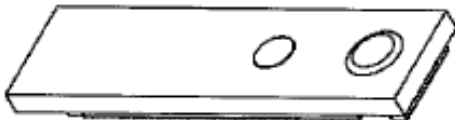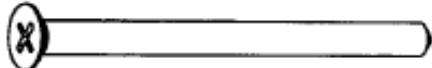
Nº	Components type	Element name	Qty, pcs
1		Key with controller	1
2		Key	6
3		Key with dynamic	1
4		Decorative overlay with Velcro	2
5		Decorative overlay without Velcro	2
6		Anchor 8x100	25
7		Mounting bar	4
8		Screw 4x80	16
9		Screw 4x50	8

SPECIFICATION


Step 1

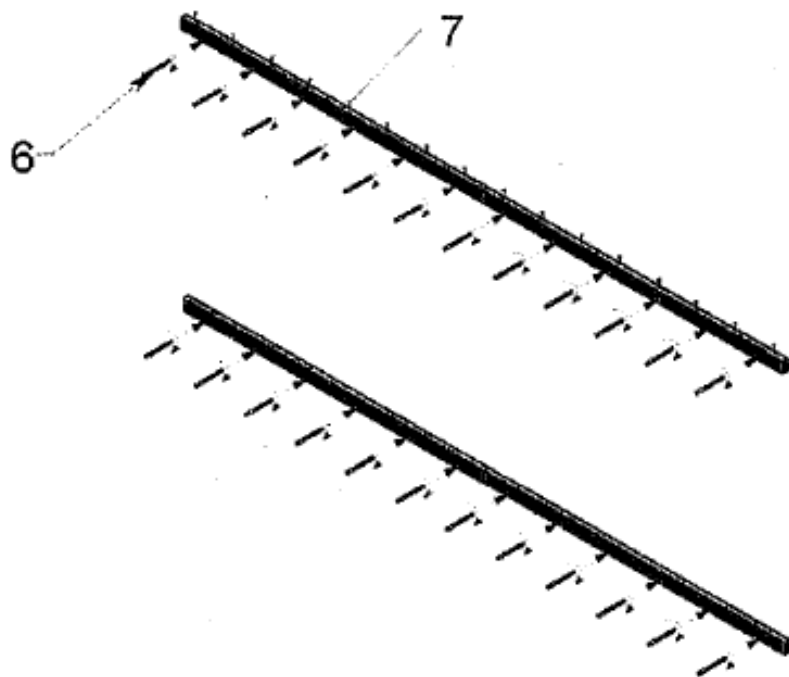


Step 2

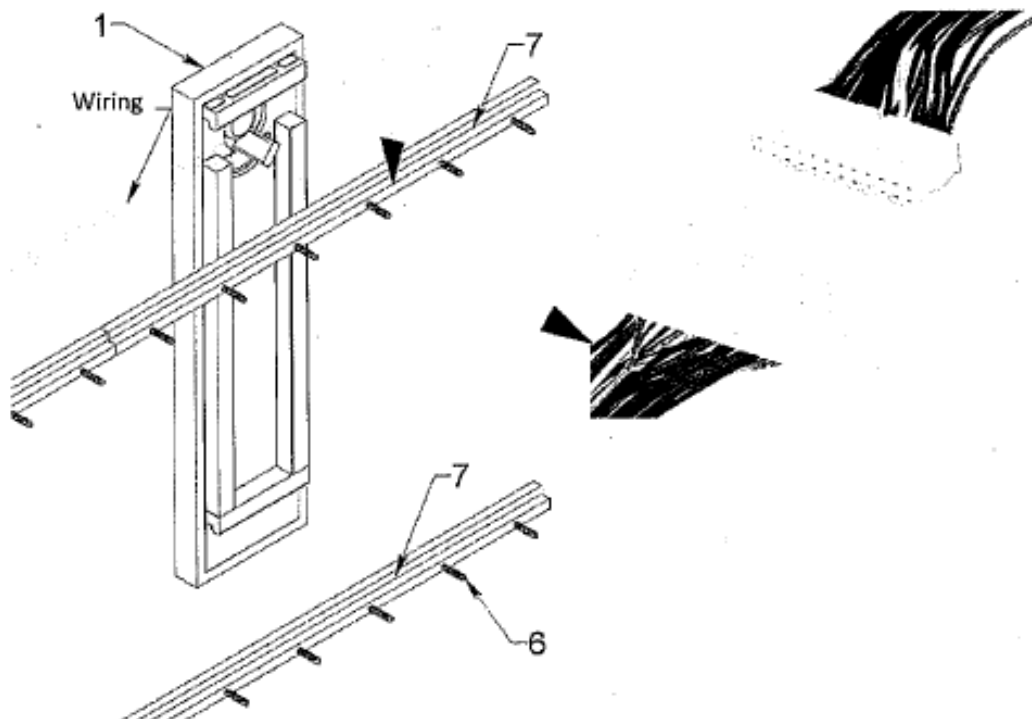

 Step 3

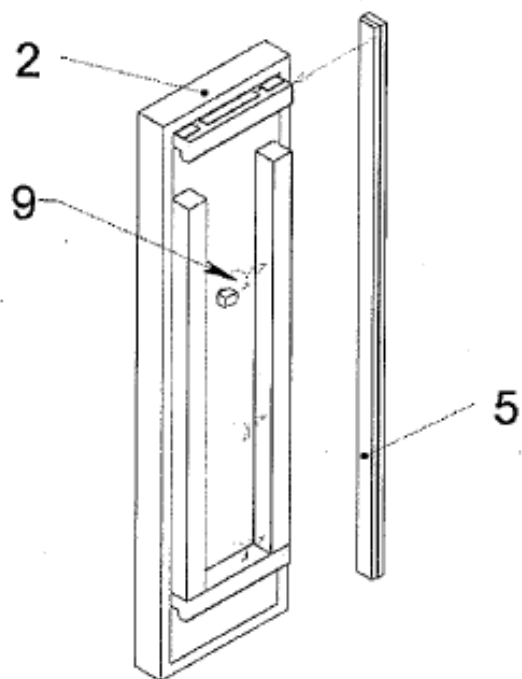


 Step 4

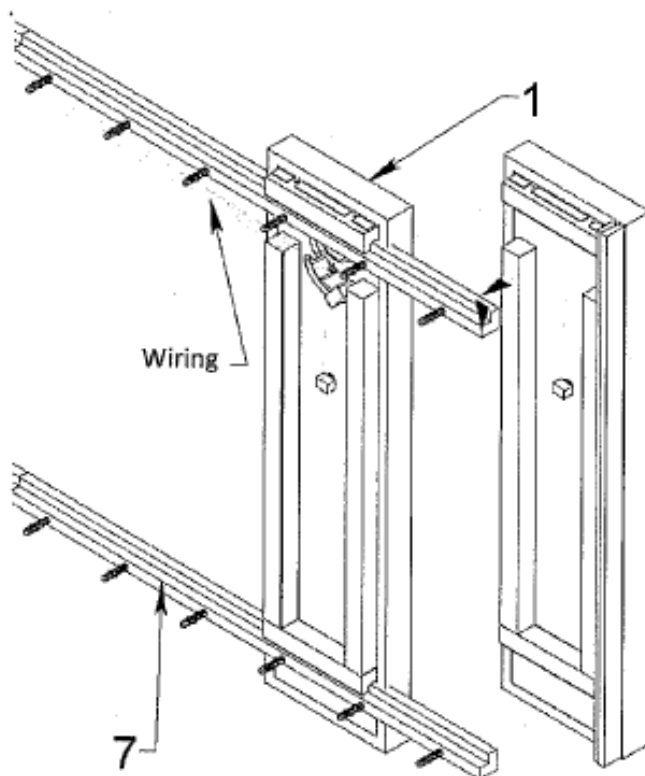


SPECIFICATION


Step 5

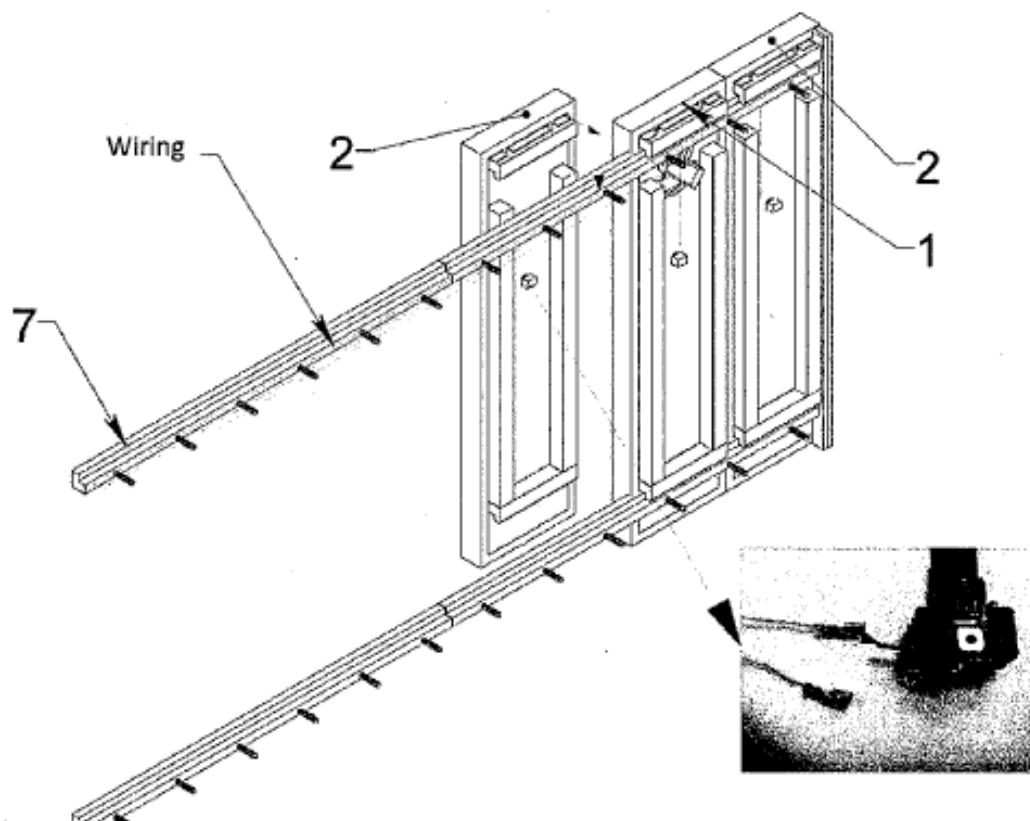

 
Step 6

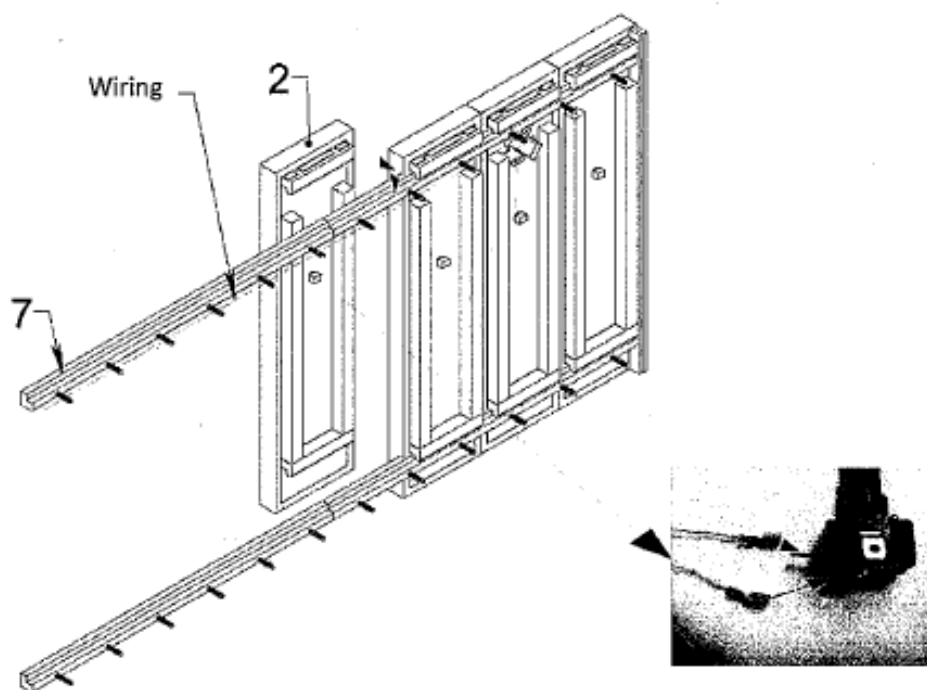

 Step 7

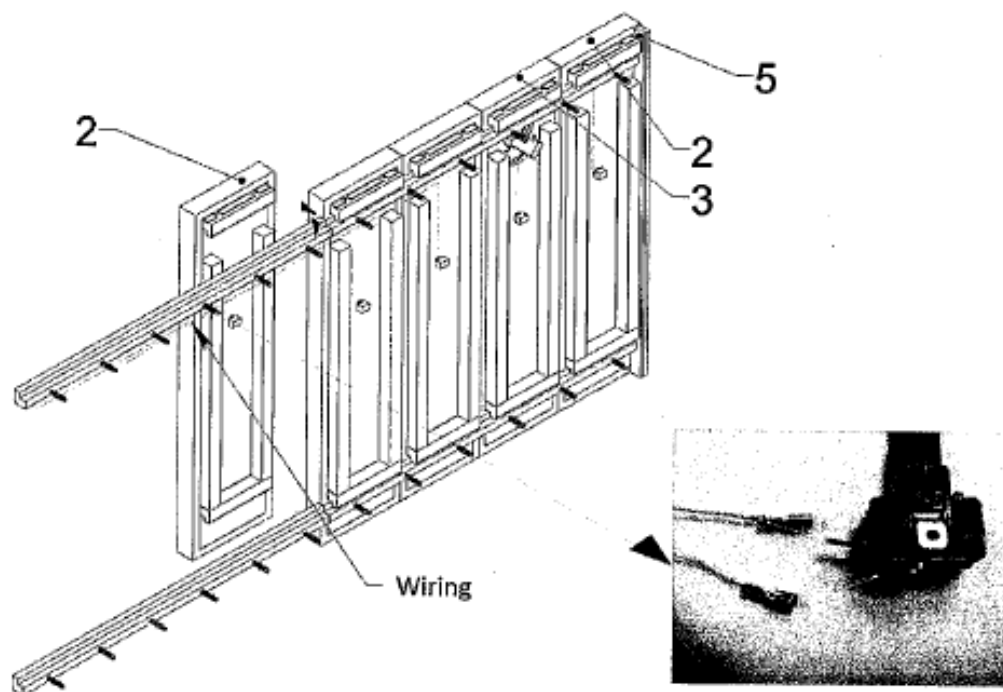


 Step 8

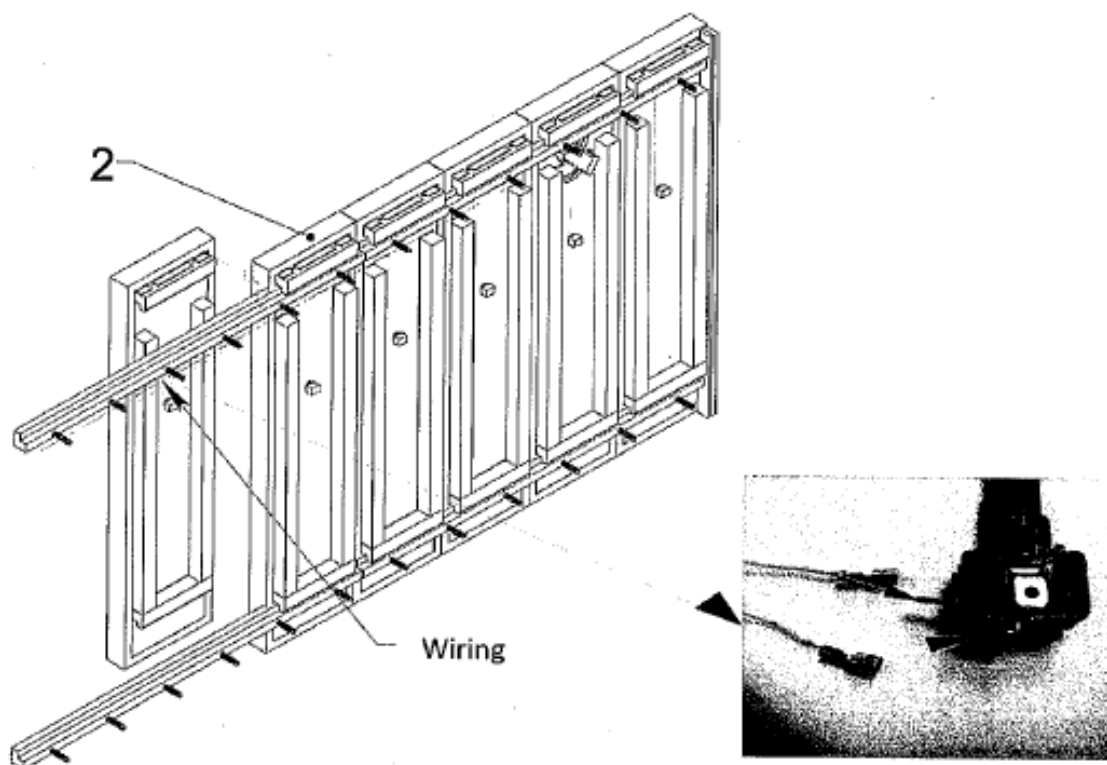



SPECIFICATION

Step 9

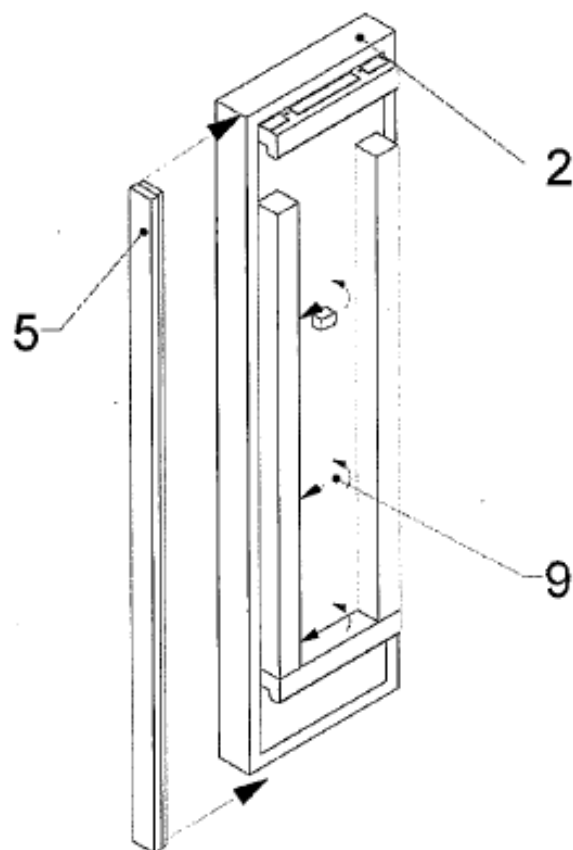

  
Step 10

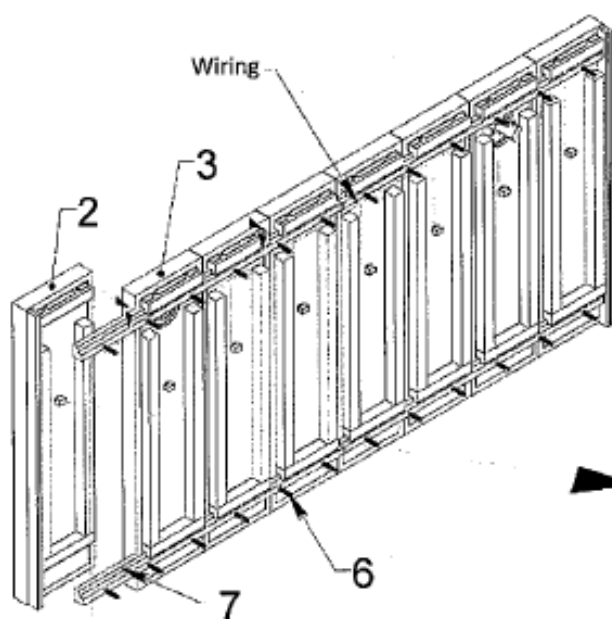

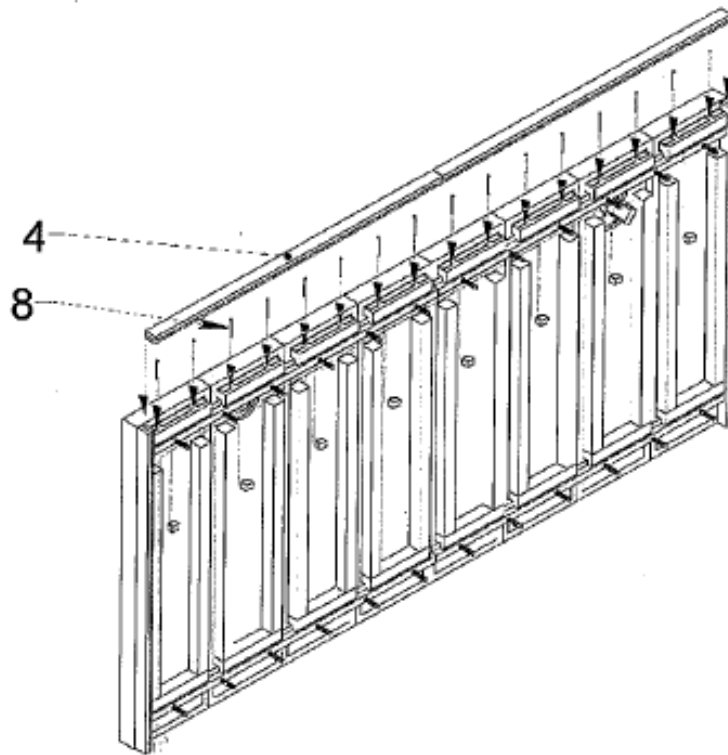Step 11**2.3 Operation**

1. Insert the plug into the socket.
2. Press the on/off button B (see Pic.3)
3. Adjust the volume by button A (see Pic.3)
4. Select the mode with button C (see Pic. 3): one press - notes, the second - other sounds.
5. Play by pressing the keys.
6. When finished, turn off by button B (see Pic. 3) and unplug it.

 SPECIFICATION

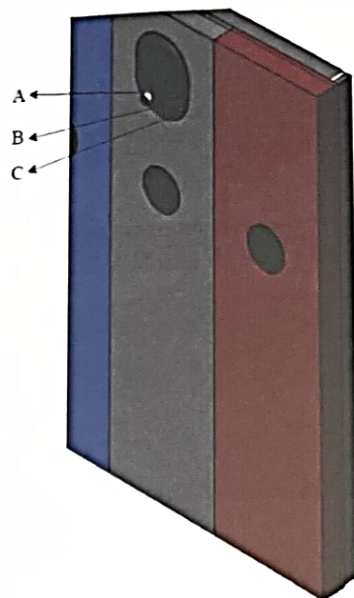

pic. 3 Piano control buttons

3. SPECIFICATIONS:

Material: plywood, faux leather (without phthalates), acrylic, wood, filler
- primary polyurethane foam, electronic part.

Overall dimensions, no more, mm: 2530x108x1200.

Dimensions in packed view, mm: 1285x560x370.

Weight, kg: 64 (+/-5%)

Power supply: from the alternating current network.

Rated voltage according to the marking: 120 V.

Rated frequency of current according to the marking: 60 Hz.

Rated power according to marking: 25 W.

Component parts:

Nº	Element name	Qty, pcs
1	Key with controller	1
2	Key	6
3	Key with dynamic	1
4	Decorative overlay with Velcro	2

Nº	Element name	Qty, pcs
5	Decorative overlay without Velcro	2
6	Anchor 8x100	25
7	Mounting bar	4
8	Screw 4x80	16
9	Screw 4x50	8

It is delivered to the consumer in disassembled form.

Fasteners: available in the kit.

Age: from 3 to 12 years.

4. GENERAL DESCRIPTION

Musical piano is a bright and interactive product that is suitable for a waiting area, school hallway, children's or sensory room. It can be used both in the form of a soft safe wall and an interactive music wall and their combinations, thus remaining the bright element of a decor which is capable to attract attention of any child. By playing, children stimulate hearing, sight, touch and develop perception, sensitivity and cognitive functions.

Touch pads can be used directly for play and used in conjunction with a number of developmental techniques. Particularly effective can be achieved by combining play and exercise. The fact is that children's physical activity attracts attention and motivates for further activities, thus stimulating the desire for development.

The specialist gets a choice to use 10 modes. Switching modes allows to choose sounds from several categories: notes and others (animal sounds, musical instruments and city sounds). The pads are covered with faux leather of different colors, they can withstand wet cleaning, they are soft, but have a strong frame that helps maintain shape. The built-in remote control has three buttons: on/off, switching mode, volume control.

Thus, touch sound pads are an excellent basis for children's development, and the use of modern game technologies in correctional

SPECIFICATION

and developmental work makes the educational process more exciting and accessible for children.

Diseases

Cerebral palsy (CP), mental retardation (MR), attention deficit hyperactivity disorder (ADHD), minimal brain dysfunction (MBD), autism spectrum disorders.

Therapy

Sensory integration therapy, game educational developmental activity.

5. STORAGE

Store in dry indoor areas in compliance with temperatures from + 10 °C to + 30 °C and a permissible humidity of 30-70%, at a distance of at least 1 m from heating appliances and direct sunlight.

6. RECOMMENDATIONS

Regularly check the seams for wear and damage, make sure that access to the internal filling is not possible.

7. CARE

- **Warning! Turn off the power before cleaning!**
- Clean the product with a soft sponge or cloth using a neutral pH soap solution (about 7 units). At the end of cleaning, wipe with a damp cloth, and then wipe dry (to remove detergent residues).
- It is also recommended to test the detergent on a separate sample of the product before immediate use in order to clearly determine whether the detergent is safe for the surface.
- Persistent stains can be removed with alcohol-based cleaners by gently wiping the contaminated surface. At the end of cleaning, wipe dry to remove residual solution.
- Do not use excessive amounts of water and make sure that the coating remains dry after cleaning.
- Do not use boiling/very hot water for cleaning of dirt.
- Steam cleaning is not recommended!
- It is strictly forbidden to use aggressive and abrasive household chemicals or other means for the care of faux leather products.
- Do not use rough cleaning brushes to remove dirt, there is a risk of scratches on the surface.
- Periodically inspect the product for damage of cords and plugs.

SPECIFICATION



Disposal: The «Crossed Wheelie Bin» symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life . The goods must be disposed of according to your local council guidelines.

Please retain this information for future reference.

Musical piano e1261 —

Customer support and assistance in the U.S.A.:



Web-site: www.playlearn.com
E-mail: support@playlearn.com
P.: 845.362.0638

Made in Ukraine

ISD | inclusive space
developer